


STEP 9: When attaching the side panels to the base, make sure the air hose and USB line pass through the square steel frame to avoid being pinched during assembly. Use four bolts and attach the side panels to the base. Attach side panel covers.




STEP 10: Attach with the Velcro patches of the backpad to the backrest. Zip the top of the backpad to the backrest.




STEP 11: Attach the tablet holder on the right arm side. Rest the tablet case on the holder.

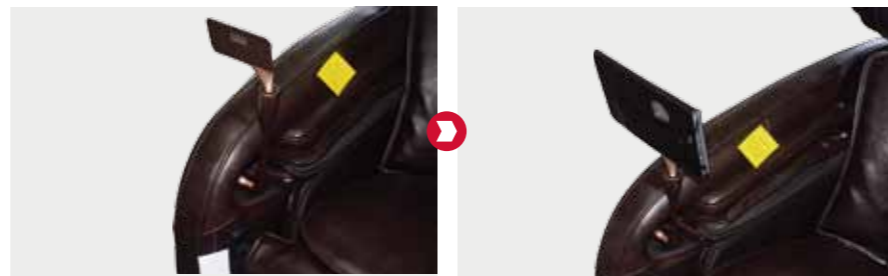

STEP 12: Attach power cord to the base and plug into a wall outlet. and turn on the power switch.

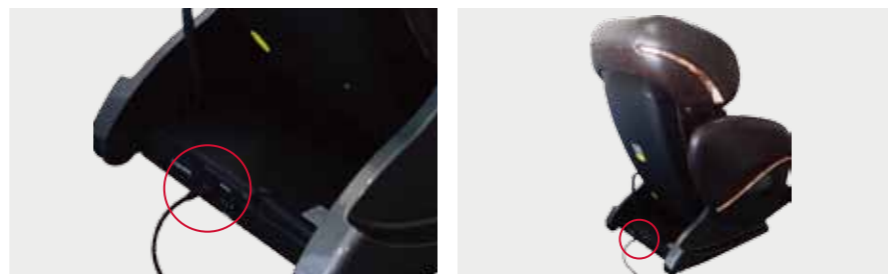

Included Items

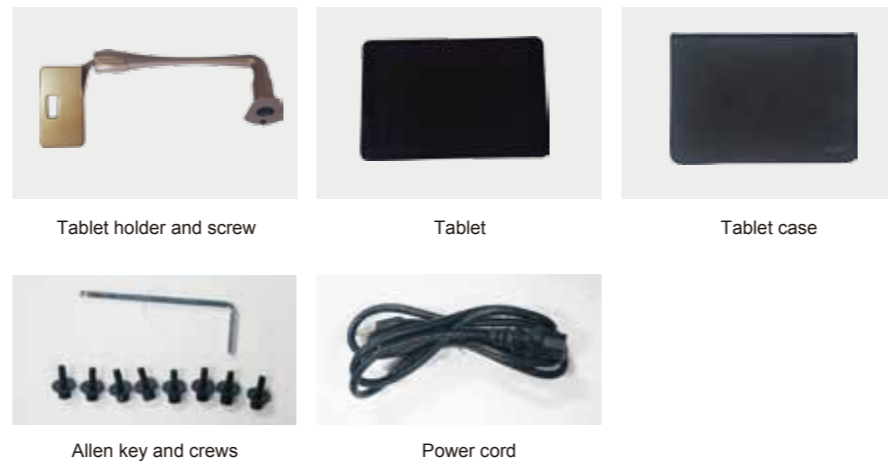


Tablet holder and screw

Tablet

Tablet case

Allen key and crews

Power cord

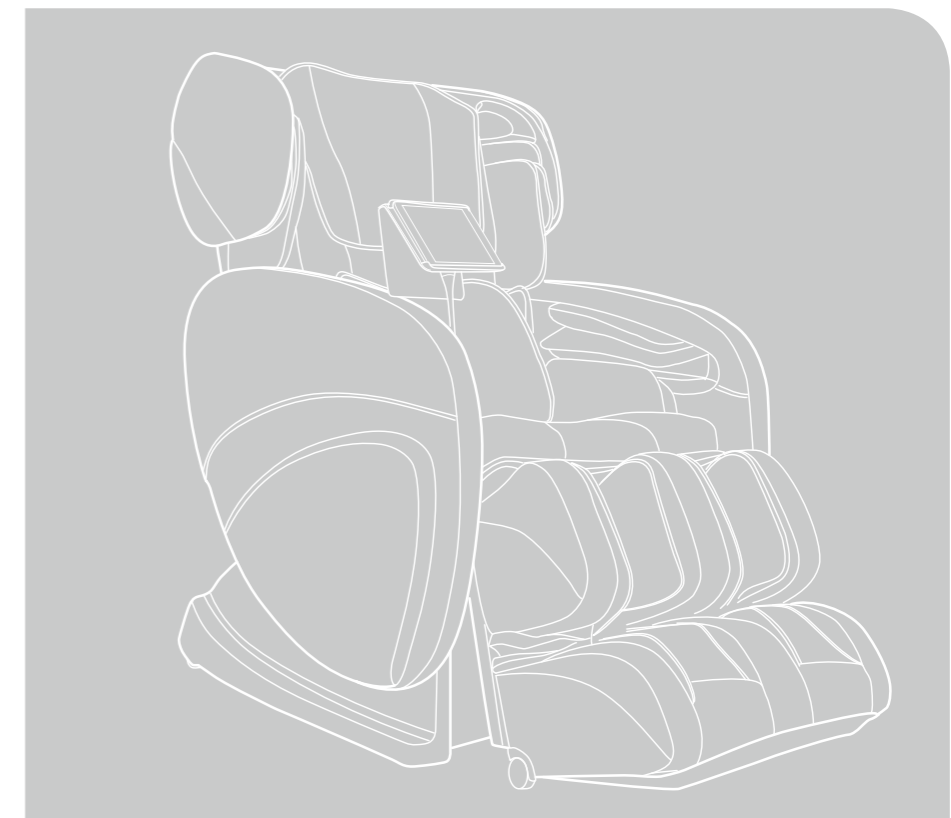

CZ-629
Massage chair

Assembly Instructions

See more product updates at:


WWW.COZZIAUSA.COM

CZ-629 Assembly Instructions

STEP 1: CZ-629 massage chair arrives in three boxes. The seat base is packed in Box 1, the backrest packed in box 2, the two side panels packed in box 3.



STEP 2: Carefully remove the seat base from box, discard all the protective materials, lay the backrest pad on the seat, and set the tablet holder and component box aside.

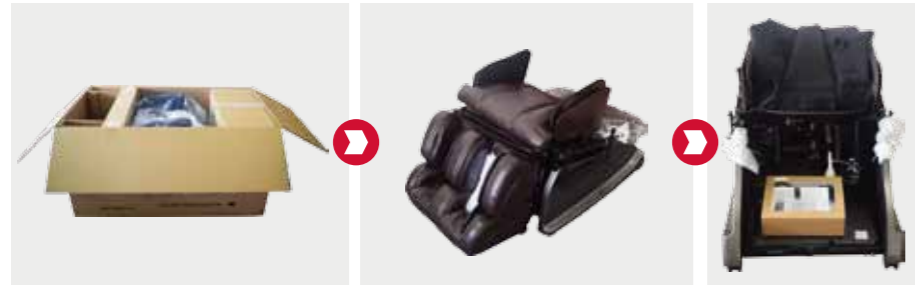


STEP 3: Cut the cable tie which temporarily fasten backrest actuator. Discard protective material on the head of backrest actuator. Remove the split pin and bolt and set aside.



STEP 4: Remove the backrest from box and attach it to the seat base. DO NOT rest it on the floor vertically otherwise damage to the backrest bracket will occur. Remove protecting materials of backrest data plug and air hose.



STEP 5: Make sure the seat is at its most upright position when resting the pivot pin to the cradle point on the seat base.

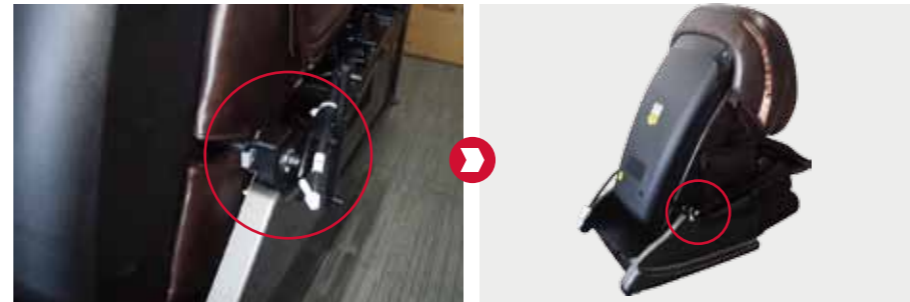

STEP 6: Push the backrest forward in order to get more space. Use bolt and split pin to attach the backrest actuator and backrest together.



Connect the backrest air hose to the air pump box, and connect the backrest dataplug into the corresponding socket on the electrical control box.



STEP 7: Recline the backrest lightly until you hear a “click” .

STEP 8: Take the side panels out of box. Pull the strip of cloth to detach the side panel cover.

